



Radio Frequency Remote Synchronization Instructions

If your RF remote control does not work with your screen, try the following to get in synced. See below for instructions.

Make sure new batteries or working batteries are in your RF remote control before proceeding with the steps.

The version number can be found on the remote control, the sticker on the screen's end cap, or the packing box.

For V 2.0 and 3.0 electric screens.

1. Unplug your screen from the power outlet.
2. Hold the **UP** button on your RF remote.
3. While holding the **UP** button, plug the screen back to the power outlet.
4. Wait 5 seconds and then release the **UP** button.
5. You can now use your RF remote.

For V 1.4-1 and below (ex 1.3, 1.4, 1.4-1)

1. Press & hold the Up button on your RF remote control so the LED light turns on.
2. While holding the UP button on your RF remote, simultaneously push the small button located on the circuit board.
 - a. In some cases, you can press this button through a hole on the end cap. (Please note you may need a small sharp object to achieve this.)
3. Continue to hold the UP button for an additional 3 seconds.
4. After 3 seconds, your RF remote should now be synced to control your screen.